

PROLiNK[®]




**PROLiNK
PC camera
User's Manual**

Revision 1.2

Important! Read this first
**Please read this manual first before you connect the camera to
your computer's USB port**

Model No.: 1. PCC810
2. PCC900

Camera Features:

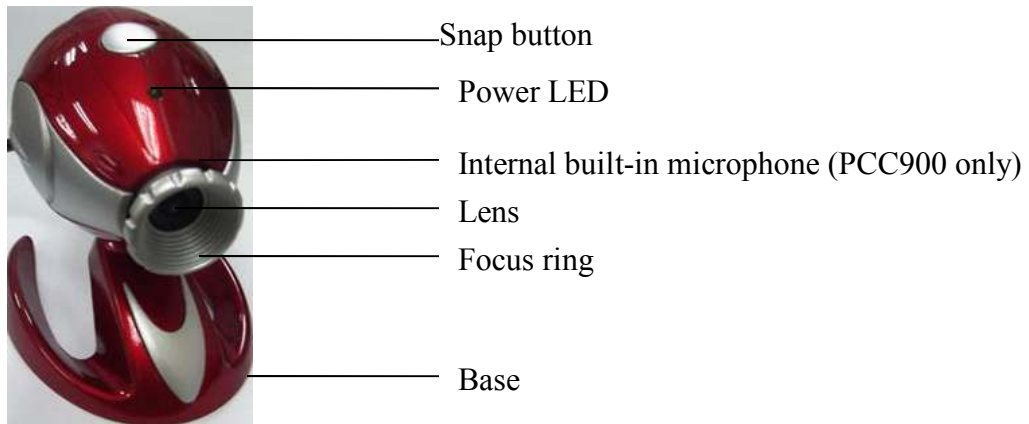

Specifications:

Max Resolution : 352 x 288 pixels (software enhanced up to 640x480 for PCC810)
: 640 x 480 pixels (for PCC900)
Frame rate : up to 30fps
Color : 16.8 million true color (24-bit)
Hardware Snapshot : push-button
Microphone : built-in USB audio device (PCC900 only)
Bundled applications : 1) VFW capture, WDM capture
: 2) VP-Eye 4.0 (optional for PCC900)

System Requirements:

- PC with Pentium MMX CPU 200MHz and above
- Available USB port
- 32MB RAM
- 12MB free hard disk space
- CDROM drive for driver installation
- Windows 98SE/ME/2000/XP

1 Setup the Camera

1. Insert CD.
2. Install driver first, then follow on-screen instructions.
3. During driver installation, you are prompted to connect the camera cable to the USB port:
 - a. Insert camera cable into computer's USB port
 - b. Complete software installation
4. Restart your PC when prompted
5. (optional for PCC900): click on "VP-Eye" link to install the bundled applications



2 Launch the Software

Click Start on Windows Taskbar, then select Programs and go to the newly created program group to launch the software

3 Position the Camera

1. Place camera in the middle of your monitor for optimal eye contact.
2. Camera can be placed on a tabletop or held in your hand to snap a picture or video.
3. Rotate focus ring to get a sharp image
4. View live video to guide your focus adjustments

4 Taking a Photo

1. Click *Start > Programs > your favorite image-editing application*
2. In the application window, click the *Capture/Snap photo* button to capture an image
3. To view the photos, double-click the image files saved in the default media folder

5 Recording a Video

1. Click *Start > Programs > your favorite video-editing application*
2. In the application window, click the *Capture/Record* button to start/stop recording
3. To view the videos, double-click the video files saved in the default media folder

6 Tips

Lighting. Shoot pictures and videos with bright light sources behind the camera and out of the picture area.

Snapshot. You can take a snapshot of the currently displayed image by just pressing once on the Snap button, which is located above the camera lens

7 FAQ

Q: Why does the installation show an error message saying the software you are installing has not passed Windows Logo testing?

A: if you receive this message, please click on “Continue Anyway” so that installation can continue

Q: How do I use the built-in microphone? (for PCC900 only)

A: You can select: “USB audio device” under the audio/record settings option of your favorite software program. The microphone is directed towards the front lens of the camera; you just need to look into the camera lens and speak towards it, to record your voice conversation.

Q: What is AVI?

A: AVI is the abbreviation for Audio Video Interleave. This is the supported video format for Microsoft's Video For Windows.

Q: Is the camera USB 2.0 compatible?

A: The camera is compatible with the USB 2.0 specification, but not compliant. This means it will work with USB2.0, but was not made for USB 2.0

Q: Is it okay to have my camera in sunlight?

A: No, do not store the camera in direct sunlight. This could damage the electronic components in the camera.

Q: How do I video conference?

A: There are many different programs you can use to video conference, the most common being the latest Instant Messaging (IM) clients like MSN messenger 6.2 & above/ICQ

Q: Can the camera be used for video conferencing over a LAN or WAN?

A: Yes

Q: How can I clean the lens?

A: You can use a soft, lint-free cloth to clean the surface of the lens to remove dust or dirt accumulation. You can also use non-abrasive lens cleaning solution if desired.

Q: What is the ideal distance range between the camera and the object of interest, in order to capture a clear focused image?

A: You should position the object of interest to be 50-80cm away from the camera lens

Q: What software is bundled with PCC900?

A: VP Eye 4.0 and it consists of 5 major components/modules: Control Panel, Digital Movie Producer, Photo EZ, Photo Greeting Card, and Photo Special Effects. You can find out more information about these program modules by accessing its respective help file.

APPENDIX

Product Support and Contact Information

At PROLiNK, we are committed to give you the best products as well as the best technical support for your product. If there is any virus in your system, we can provide suggestions like where you can find a solution to remove the virus, but we would be unable to assist you until the virus is eradicated

Singapore Service Centre

Tel: (65)62965455

Fax: (65)63925455

Email: support@fida.com

Address: Blk 105 Boon Keng Rd #06-13, Singapore 339776

Operating Hours: Mon-Fri :0900-1745 hrs Sat : 0900-1300 hrs

Malaysia Service Centre

Tel: (603) 8023 9151

Fax: (603) 8024 9161

Email: support_my@fida.com

Address: 29 Jalan USJ 1/31, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia

Operating Hours: Mon-Fri: 0900-1730 hrs Sat: 0900-1300 hrs

www.fida.com

© Copyright 2005 Fida International (S) Pte Ltd

Windows 98, Windows NT, Windows 2000, Windows Me and Windows XP are registered Trademarks of Microsoft Corporation.